




A Compact and Luxurious HomeLift

The Stiltz Duo Alta through-floor homelift is designed to make it easier for you to move around the house. Whether you're starting to find the stairs a bit much, or are planning ahead by future-proofing, you will find a Duo Alta will fit discreetly into any home.

A Duo Alta is elegantly curved, and with its clear car body it will perfectly compliment your style of décor. It's so versatile that it can be installed in the corner of a room, in a closet or in a stairwell void. Alternatively, it can take pride of place in the center of a room or entrance hallway.

And don't worry about running costs, Stiltz HomeLifts use minimal electricity and can even be run off a regular domestic outlet.

Installation is quick and easy. Once the simple construction is complete your lift can be installed in as little as a day. Your Authorized Stiltz Dealer will then guide you through how to use your lift. Of course, any further help or assistance you may need is always just a phone call away.

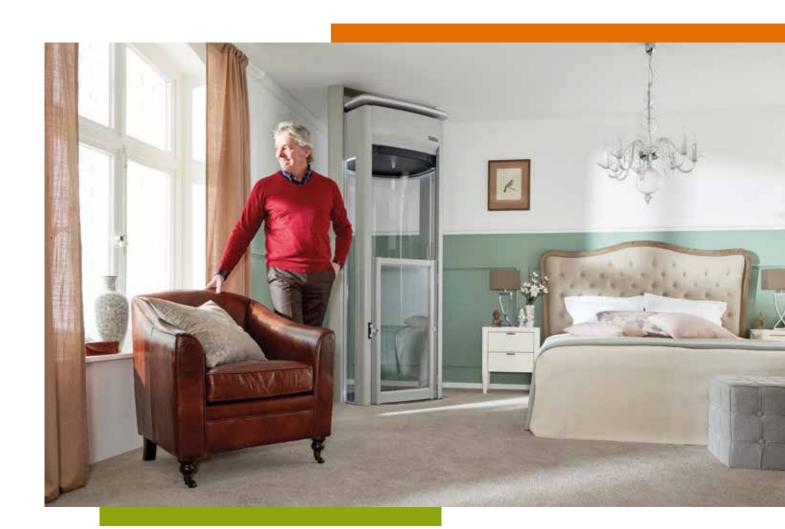

Why Choose a Stiltz HomeLift?



Maximize your living space

Move your lift to another floor and with only two slim rails remaining, you'll hardly know it is there.



Small footprints

Both the Duo and the Trio models have extremely compact footprints, despite the fact that the Trio Alta will accommodate a full-sized wheelchair.



Elegant interior lighting

Subtle and attractive internal lighting means you can travel in safety any time during the day or night.



Packed with safety features

Multiple sensors are fitted to every Stiltz HomeLift to ensure that everyone remains safe – both inside and outside the lift.



In-car control panel

The in-car control panel is designed to be extremely easy to use with push-button, hold-to-run controls.



Remote control

Your homelift comes with two remote control handsets included. Additional handsets can be purchased if required.

Stiltz HomeLifts Features & Benefits



Small Footprint

The Duo Alta footprint is a remarkably small 8.5sf. The slightly larger Trio Alta footprint can accommodate a full-sized wheelchair and has a footprint of 15.5sf.



Quiet

Powered by a self-contained, electric drive motor which is completely hidden away in the lift car roofspace. There are no noisy hydraulics with a Stiltz HomeLift.



Fast Installation

Standard installations can take as little as one day once the ceiling aperture has been created by a qualified contractor.



Power Consumption

A Stiltz HomeLift plugs into a single, standard domestic outlet - just like any other appliance. When running, it uses very little power.



Unique Guide System

It's what makes a Stiltz HomeLift so wonderfully versatile; our self-supporting structure of two parallel, vertical rails bear the entire load of the lift. No additional burden is placed on the structure of your home.



Self-Contained Drive System

Our unique, self-contained drive system is cleverly concealed in a single space within the roof area of the lift car. There's no need for a machine room or separate pump.



Wide Entry


Wheelchair users will find the wide entry and exit points of the Trio Alta particularly useful when manoeuvring their chair in confined spaces.



Easy Access


For safety and comfort, the Trio Alta comes with a gently-angled ramp to enable more convenient entry for wheelchair users and those unable to manage steps.

Typical Lift Installation Applications

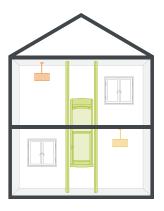


Standard

This is the most common configuration. The homelift will travel between a downstairs room and arrive upstairs, typically in a bedroom.

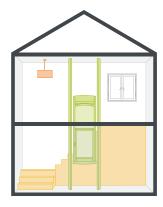


Stairwell void/landing

Where there is enough room in the turn of a staircase this positioning option makes use of the dead space in the void making the homelift even more unobtrusive.

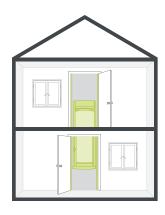

Closet

Thanks to the compact nature of a Stiltz HomeLift you can choose to have your lift completely hidden by installing it inside a closet.

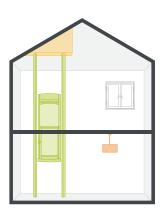


Sloping/vaulted ceilings

Our vertical rails need to fix to a horizontal surface. But don't worry if you have a vaulted ceiling. A contractor can provide clever solutions to overcoming angled or high ceilings.



Garage

A Stiltz HomeLift will allow you quick and safe access from a garage into your home. This application will require the construction of a simple shaft in the garage.

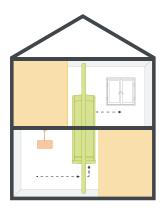


Thru-Car


Unique to Stiltz HomeLifts is the Thru-Car concept. Enter and exit through opposite sides of the lift car - ideal for balcony applications or bi-level homes where a 3-stop lift is needed.

Lift Footprints


Duo Alta Weight limit 375lb / 170kg

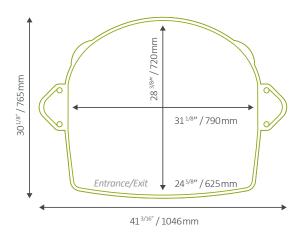


Duo Classic/Vista Weight limit 375lb / 170kg

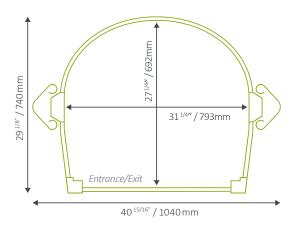


Duo Thru Weight limit 375lb / 170kg

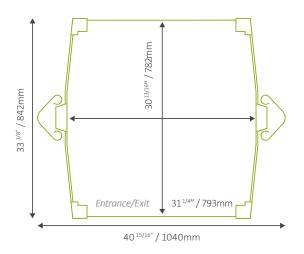

Trio Alta/Alta Thru Weight limit 500lb / 227kg

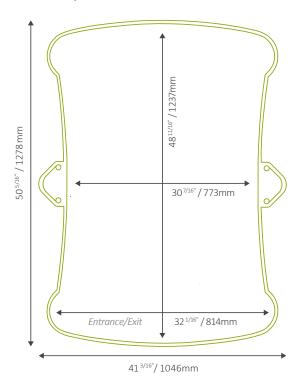

Trio Classic/Vista/Thru Weight limit 485lb/220kg

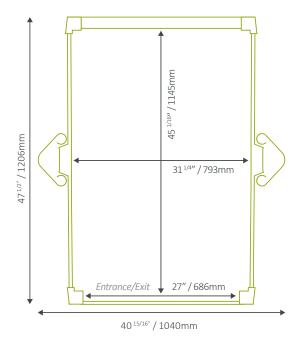

Required upstairs ceiling heights

- Minimum standard upstairs ceiling height for all products other than Trio Alta is 93" / 2360mm.
- Trio Alta requires a standard minimum upstairs ceiling height of 96" / 2438mm.
- · All cars can be special ordered with a cab height reduced by 4" / 100mm if required due to lower upstairs ceiling heights.

^{*}Dimensions subject to change.

FAQs

Is a Stiltz HomeLift suitable for wheelchair users?

Yes. The Stiltz Trio Alta HomeLift is ideal for homeowners with mobility issues as it allows them the freedom and independence to move around the home unhindered.

The Trio Alta is our widest and longest model and can accommodate a full-sized wheelchair. It is an ideal alternative to a stairlift and perfect if you have limited mobility.

Can I stay in my home for longer with a Stiltz HomeLift?

Yes. A Stiltz HomeLift is a great help to those with mobility problems, but it is also purchased by those who are able-bodied and looking to future-proof their homes. This means you can have the peace of mind to continue to live a full life in the family home you love for many years to come.

What happens if the power fails and I am in my Stiltz HomeLift?

In case of a power outage to the home all Stiltz HomeLifts are equipped with a battery back-up facility. This is included as standard with the lift and will allow anyone in the lift at the time of power failure to gently descend to the lower level of the home, exit the lift, and wait until the power comes back on.

Does the Stiltz HomeLift have a door?

Stiltz HomeLifts are fitted with a hinged door (doors come in both half height and full height options) that provides a physical barrier during the operation of the lift. The door locks will release when the lift arrives safely at the floor of choice.

Lifts with half-height doors also come equipped with an infra-red light screen to detect anything crossing over the top of the door - the lift will stop if this happens.

What construction will need to be carried out?

Unlike conventional lifts, all that a Stiltz HomeLift requires for installation is the appropriate aperture to be cut out and trimmed by a qualified contractor. The work itself is minimal and not time consuming. There may be instances where small amounts of additional work need to be carried out such as moving pipes, but these will be easily managed by your contractor. The lift can also travel to a landing where a gate can be installed that will only open if the lift is at the landing.

How safe is the Stiltz HomeLift?

The Stiltz HomeLift has safety sensors fitted above and below the lift car which detect obstructions and stop the car. The lift is also fitted with overweight and out of balance sensors as well as a telephone.